









Lead Acid -







Remote LED Configuration

(Optional For Operation)

Is Your GX Charger Out Of Reach? Configure Your Charger To Signal A Visible LED.

The Remote LEDs Port can be used to connect LEDs for easy monitoring when the charger's LEDs are not accessible. The port supports two LEDs, and it reverses the polarity between the charging identifier and error indicator. The connector is designed for LEDs to directly attach (see Figure 2), with a +5V circult and a 1K OHM resistor. As a result, the typical LED drive current is 3ma.




Charging Modes		Green LED
Light	Explanation	
Blinking	Battery is charging.	
Solid	Battery is fully charged.	
Off	Charger either in Standby	or Error Condition.



NOCO

Remote LEDs Inhibit

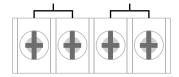

Anode

Cathode

Figure 1. Labeled Port

Cathode

GX Chargers give you the ability to customize with additional auxiliary functions, including adding an **LED** and using the inhibit feature (see Figure 1).

Green LE	D			
Figure 2. LED Configuration				
Red LED				

Error Conditions		Red LED
Light	Explanation	
Single Flash Sequence	Battery will not hold charge. Have battery checked by professional.	
Double Flash Sequence	Possible battery short. Have battery checked by professional.	
Triple Flash Sequence	Battery voltage too high for selected charge mode. Check battery and charge mode.	
Quadruple Flash Sequence	Abnormal AC grip power. (VAC ,85 or >250V, or Frequency <45Hz or >65Hz)
Solid	Reverse Polarity. Reverse the battery connections.	
Off	Charger either charging or in Standby.	

Anode

